

DHCP Configuration | InTouch Clock

Last Modified on 02/09/2022 11:36 am EST

To

set your clock to use DHCP, follow the steps below.

1. Select DHCP.
 2. Set Speed to Auto.
 3. Select Submit and wait for "Accepted" settings alert.
-